ASSEMBLY INSTRUCTIONS

MODEL#:RL1030

OTE: Only the technical personnel can be allowto fix and maintain.

IPORTANT!

ke sure that the power is switch off at the electricity mains supply fore commencing work.

XING INSTRUCTIONS

Open parts according to the bag as shown in figure B shows, installed ngs Taiwan screw, and should be fixed to the ceiling in the right place.
Ground Connection (See picture 1): there are one tapping hole & two mples.
nd the supply ground wire (2) on the green ground screw (15) and then put into
pping hole. Connect the fixture ground wire (3) with supply ground wire) by connecting terminal (12). Caution: DO NOT connect ground wire with pply power wire.
Connect fixture supply wire with power supply wire . Caution: Remember distinguish the positive and negative charges. (See picture 2)
Push canopy up to the ceiling and Lock cuttlefish nut

EPLACEMENT BULB

not exceed the maximum wattage.
ght bulbs recommended: RL1030 G4-6*20W Max. Type G4.

LEANING CARE

ean with a soft dry cloth.

AFETY INFORMATION

Lamp used must in rated voltage, and do not touch the bulb with bare hands
Always switch off the electricity supply and allow to cool for 10 minutes efore changing the light bulbs.

If the external cables have been demaged, Pls change or repair by nufacturer or service agency or professional electrician, In order to oid the danger.

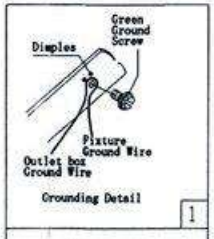

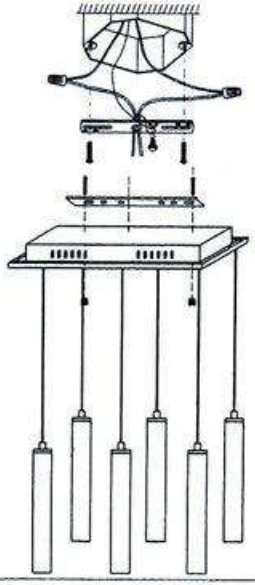

A